
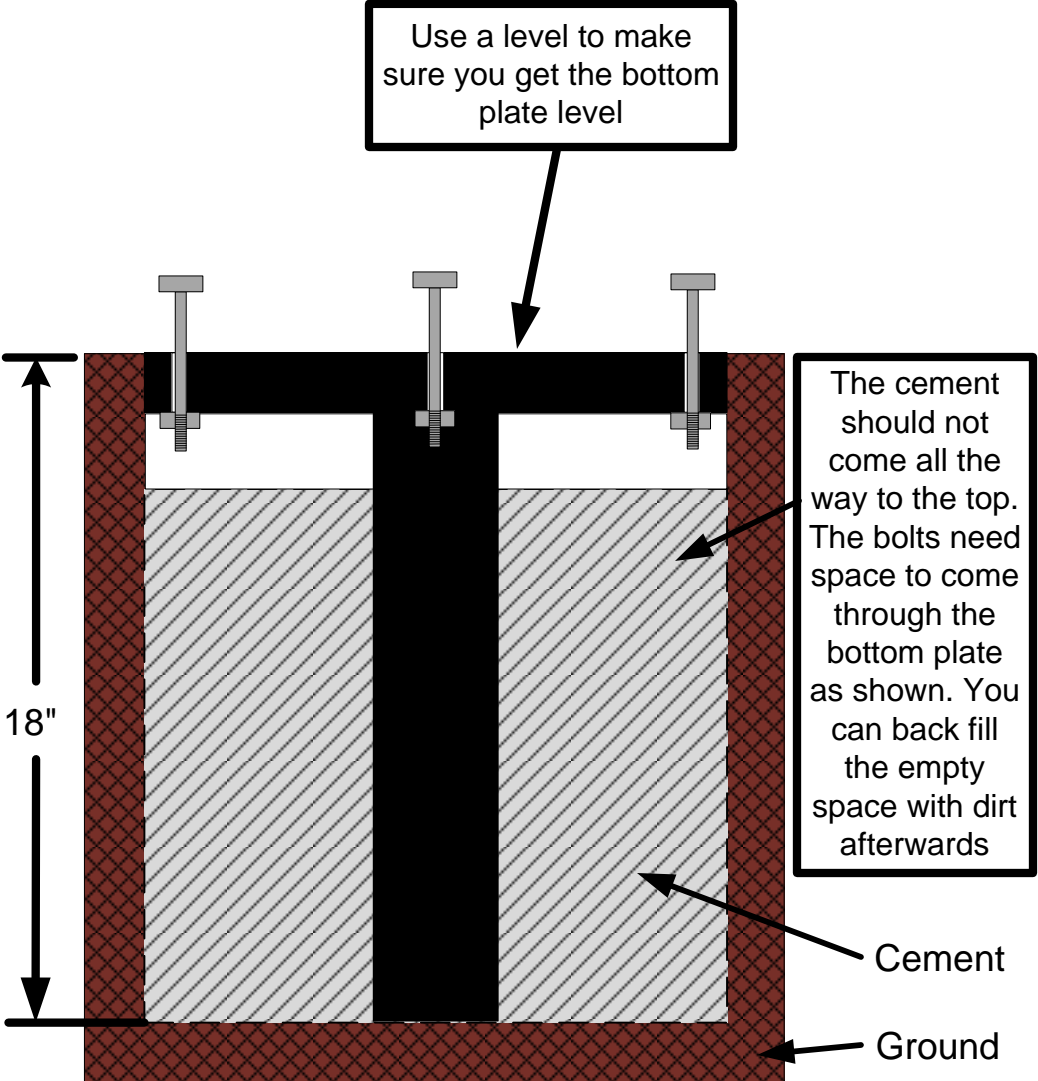



Mailbox Post Installation

Please read all pages before installing your mailbox post

Use a level to make sure you get the bottom plate level

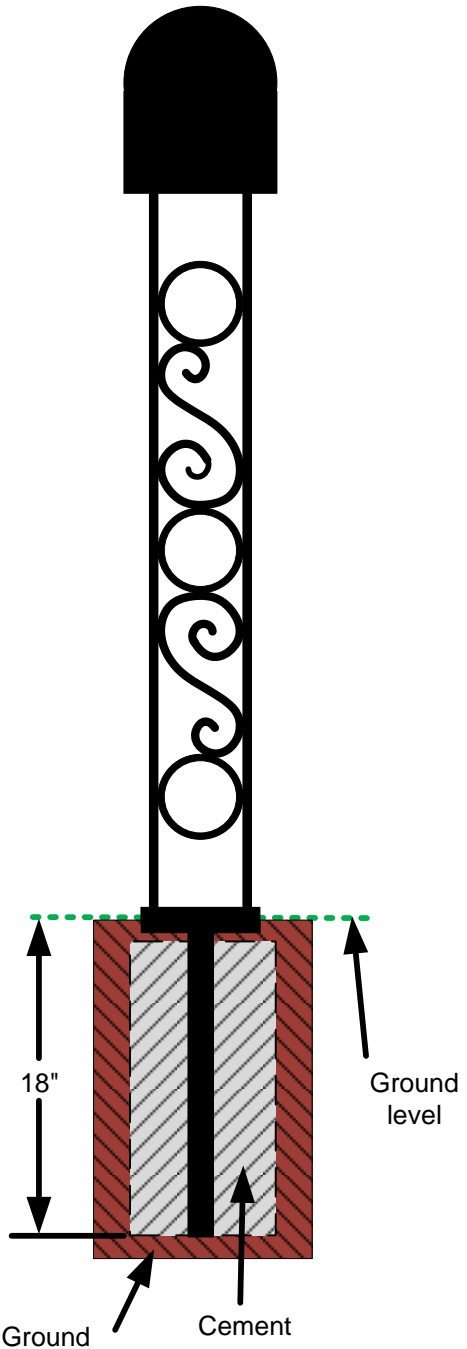

The cement should not come all the way to the top. The bolts need space to come through the bottom plate as shown. You can back fill the empty space with dirt afterwards

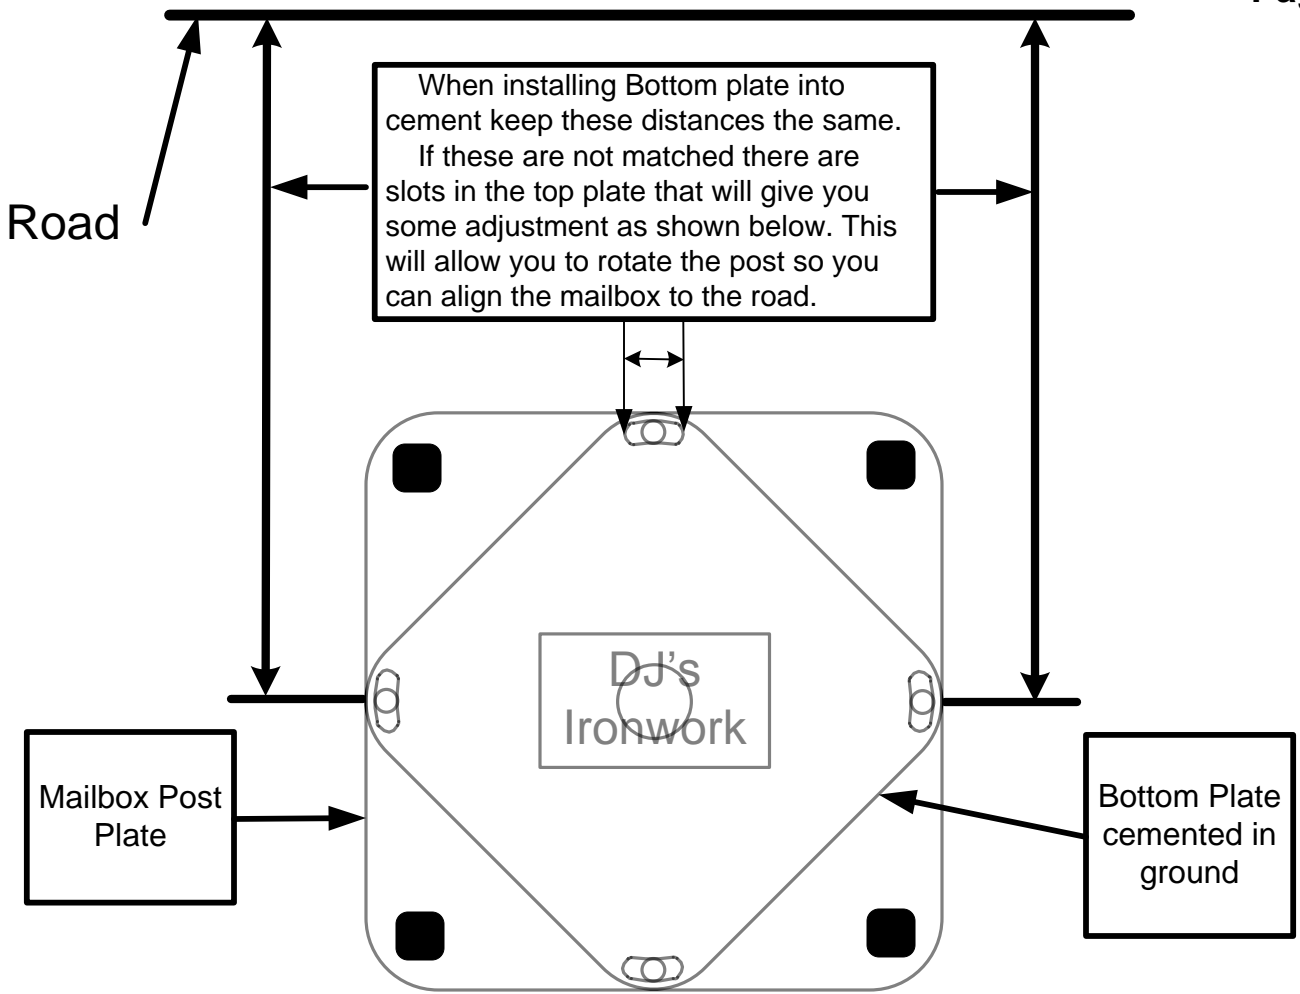

Mailbox Post Plate and Bottom Plate overlayed

